


Top-Down Bottom-Up Restraining Diagram
(with important details)
Please see standard restraining instructions also.

Fix My Blinds.com

IMPORTANT
This intersection is the only place where the cords should cross inside the top stationary rail.

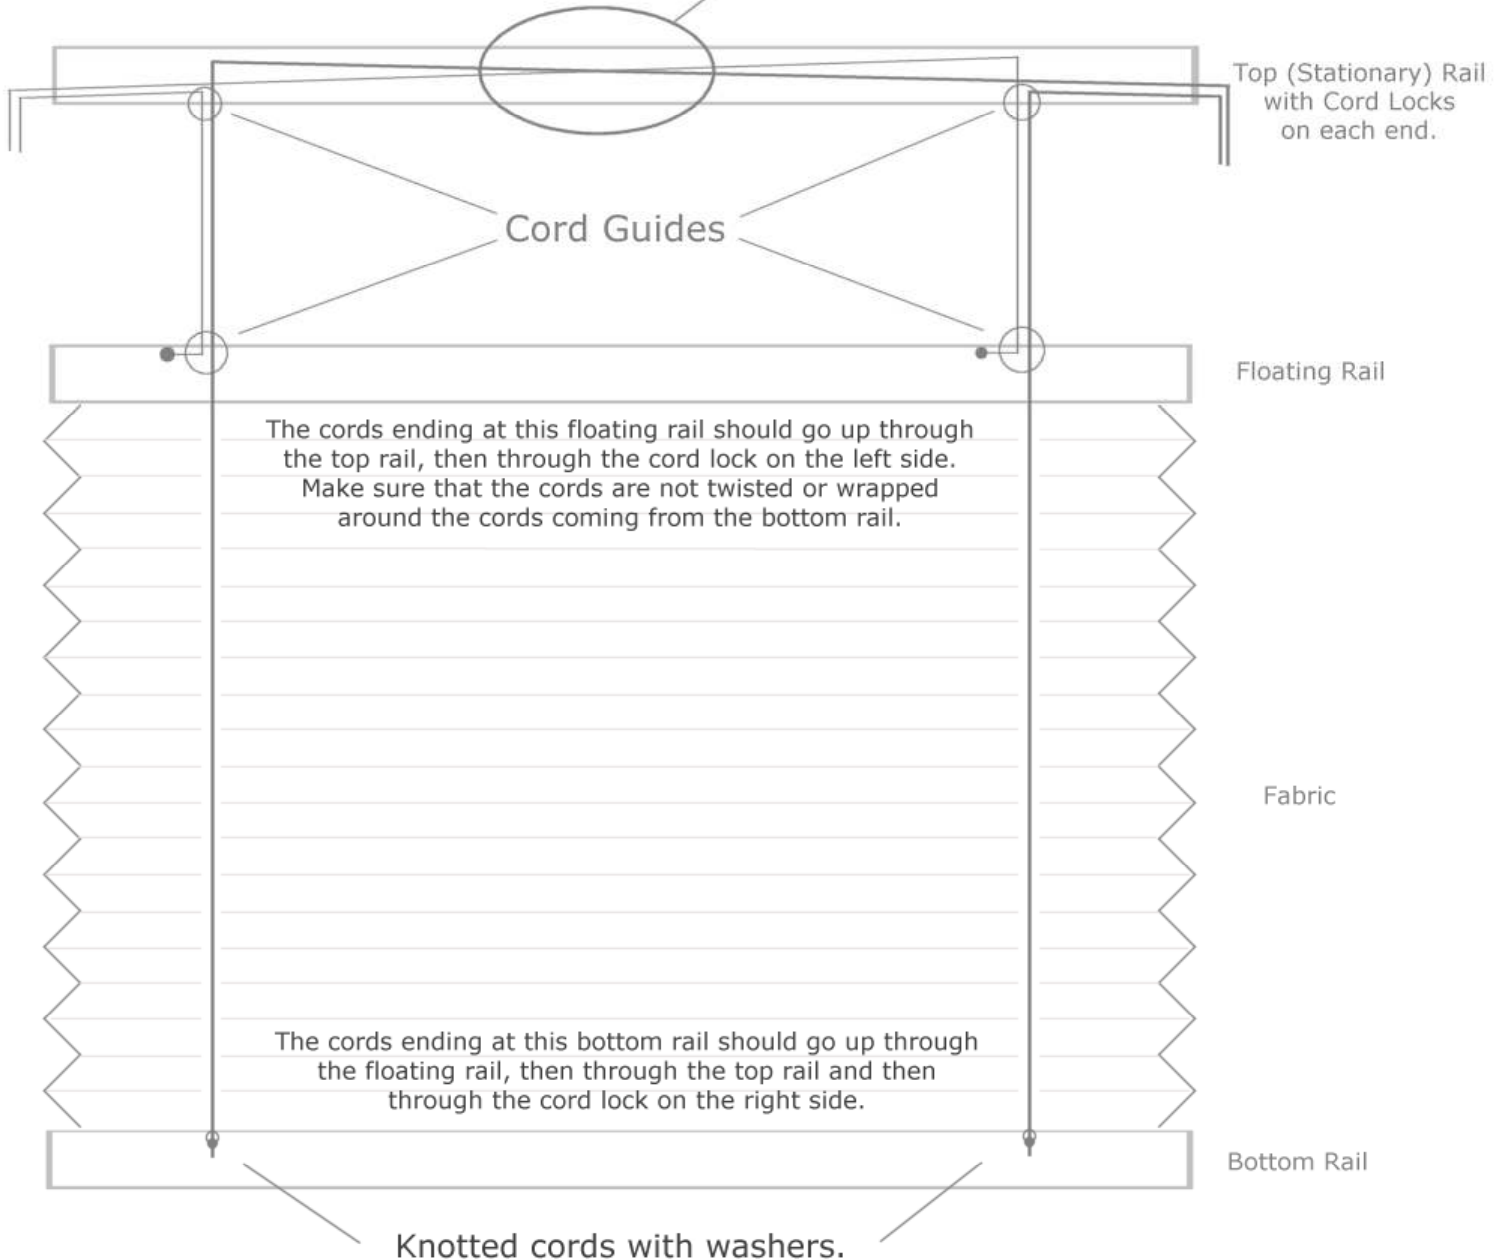

When restringing a top-down bottom-up shade you should restring the floating rail first, then the bottom rail, then put the strings through the top rail last. Make sure to not tangle the strings.